


Audit & Test Equipment

CM8300x Constant Monitor

Audible alarm on Earth, ground, mat or wrist strap connection fail

CM8300R

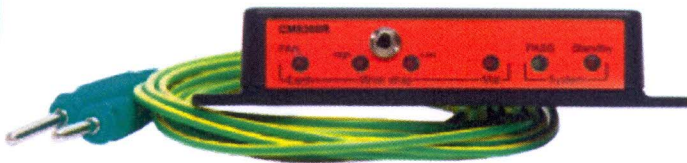

For use with dual wristband systems

CM8300C



Features body mass adjustment

UNDER BENCH OPTION



Inverted label - CM8300RU & CM8300CU

CONNECTION KIT, INCLUDED



As shown, two 0Ω leads supplied

Audit & Test Equipment

CM8300x Constant Monitor

The In-Line wrist strap, mat and Earth Constant Monitor is designed to continuously monitor whether the wrist strap, bench mat or the Earth is disconnected whilst simultaneously checking the Earth to ground system is working correctly.

Should any part of the ESD system fail a red LED indicator will illuminate and a buzzer sound. That part of the system should be checked using the appropriate test equipment before continuing with manufacture

Features of the CM8300C


Wrist strap body mass adjustment for individual user set up.

Features of the CM8300R

Automatically enters standby mode when wrist strap cord is removed.


Indicates 'high' or 'low' fail for the users wrist strap.

Installing your constant monitor

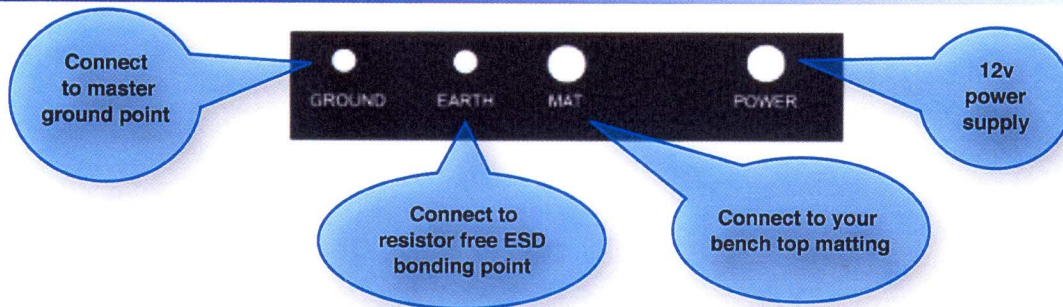

The ground and Earth connections must be on separate systems to ensure proper monitoring. Earth, ground and mat connections MUST be made via 0 ohm cables (2 supplied in kit).

Using your constant monitor

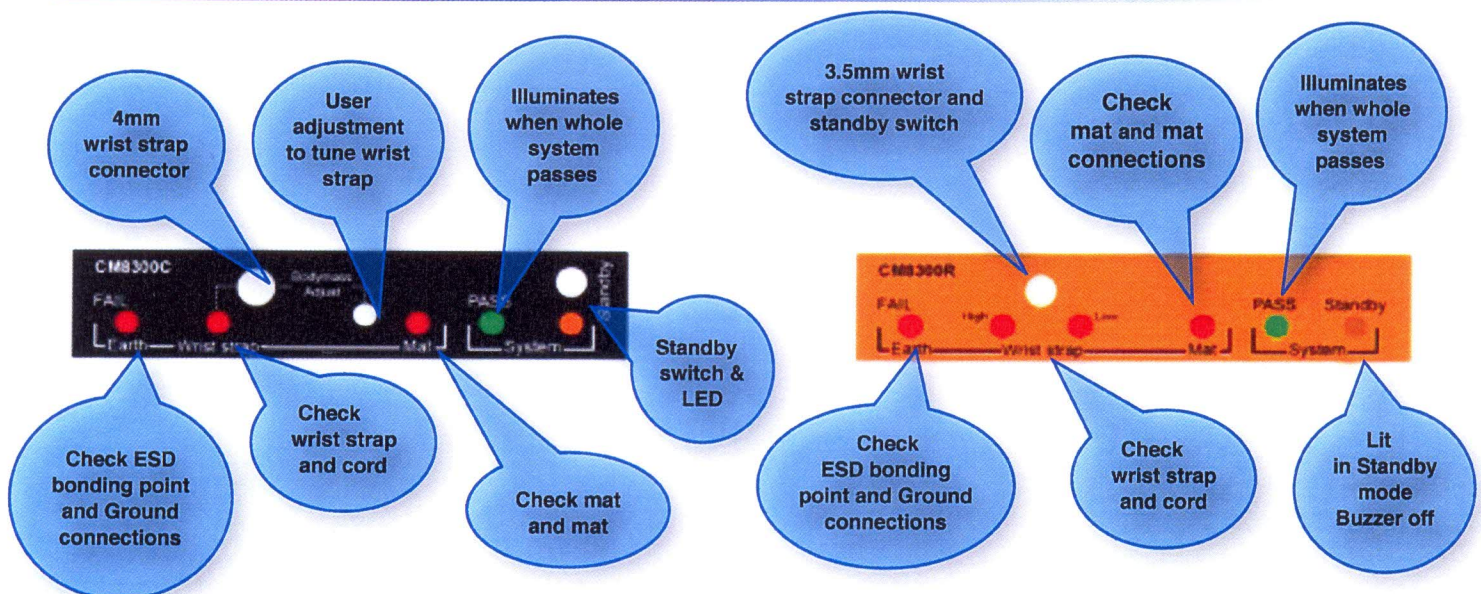

The information contained within this spec sheet is for guidance only.

We make no warranties expressed or implied and assume no liability regarding any use of this information.