

English



Stand for TE

Ref. TE-SD



Packing List


The following items should be included:

Stand for TE 1 unit Ref. TE-SD





Features

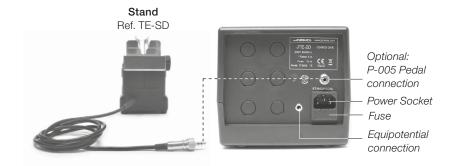

Adjustable Stand

Adjust the tool holder angle to suit your work position.



Removing the Nozzles

Used to remove the TE Nozzles.



Operation Modes

From the main Menu, select the mode to activate the tool depending on the task.

Stand + Autostart OFF



Press the start/stop button to blow hot air.

Stand + Autostart ON



The tool automatically starts blowing hot air when lifted from the stand.

Pedal*



Press the Pedal to blow hot air and release to stop. *The **P-005** Pedal is not supplied. See our website.

The tool stops blowing hot air when returned to the stand.



Maintenance

Before carrying out maintenance or storage, always unplug the stand from the station and the tool.

- Use a damp cloth to clean the stand.

 Alcohol can be used only to clean the metal parts.
- Check periodically that the metal parts of the tool/stand are clean in order to have a good detection when the tool is in the stand.
- Periodically check all cables and tubes connected.
- Replace any defective or damaged piece.
 Use original JBC spare parts only.
- Repairs should be performed only by a JBC authorized technical service.



Specifications

- Weight: 1.24 kg (2.73 lb)

- Dimensions: 80 x 110 x 150 mm

Complies with CE standards

ESD protected housing "skin effect"



Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear due to use

or mis-use.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.



This product should not be thrown in the garbage.

In accordance with the European directive 2002/96/EC, electronic equipment at the end of their life must be collected and returned to an authorized recycling facility.