



www.jbctools.com

INSTRUCTION MANUAL



WSU

Wire Stripper Control Unit

This manual corresponds to the following references:

- WSU-9A (100V)
- WSU-1A (120V)
- WSU-2A (230V)

Packing List


The following items are included:



WSU Control Unit 1 unit




Power Cord 1 unit
Ref. 0024092 (100V)
0023715 (120V)
0023714 (230V)

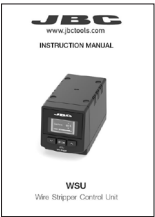


Manual 1 unit
Ref. 0027814


Features

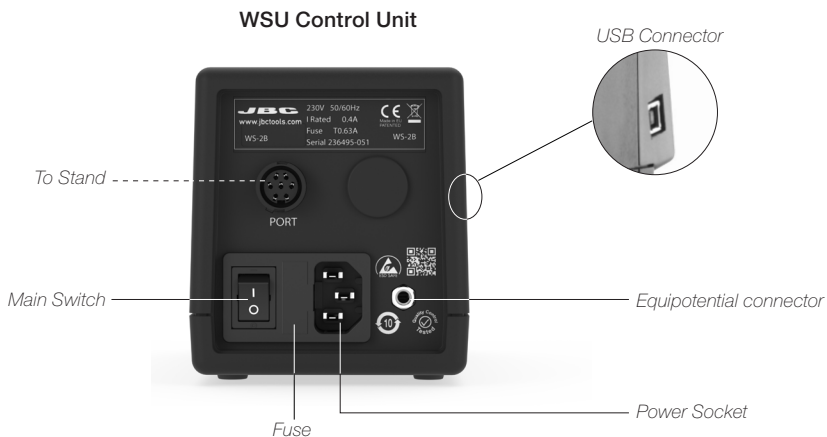

Connection with WS140

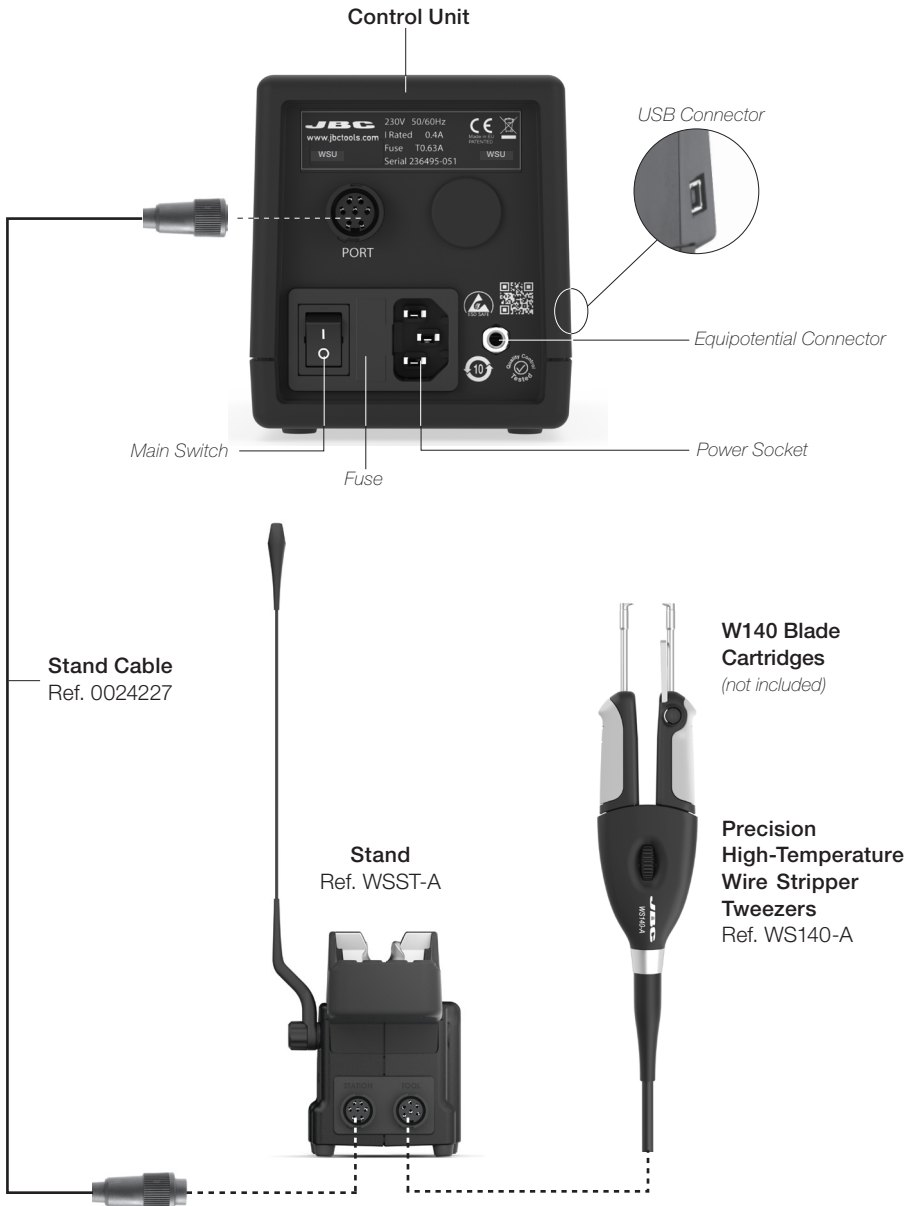


Connection with WS440

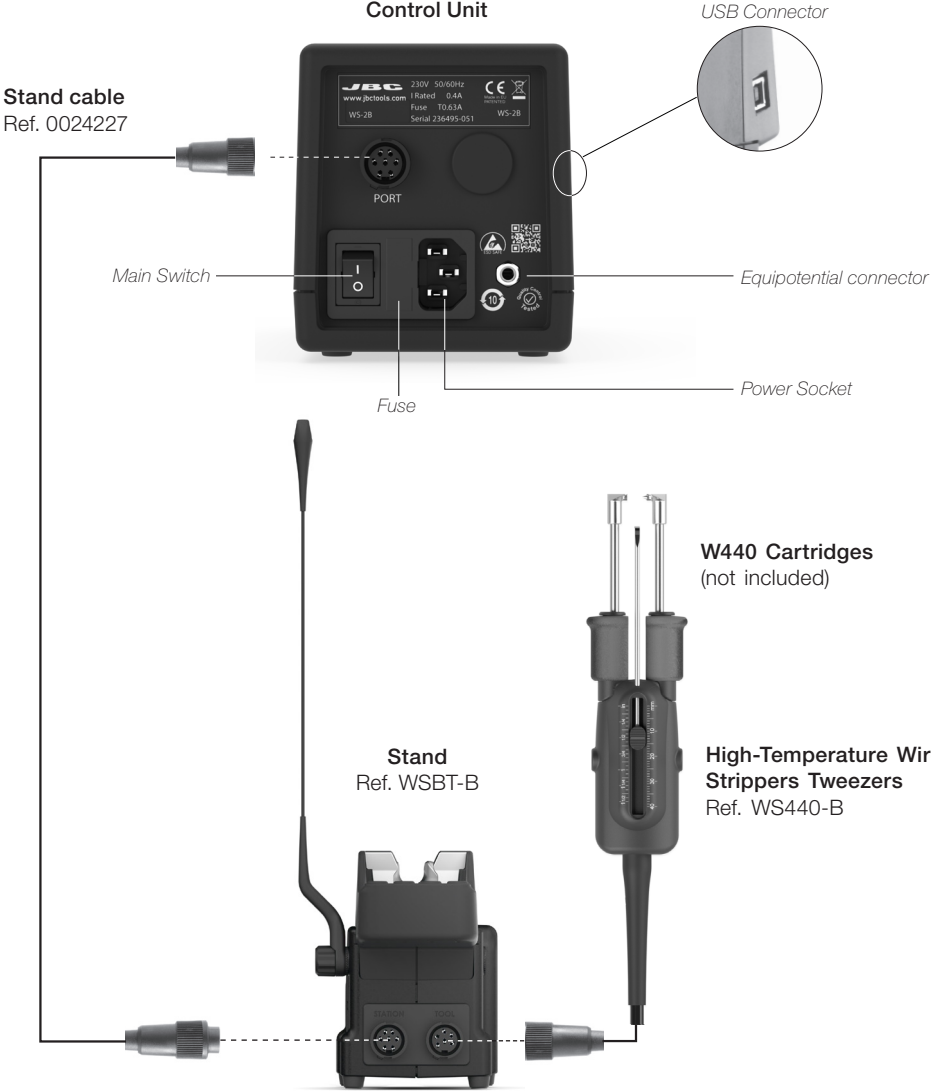

Control Process

Work Screen

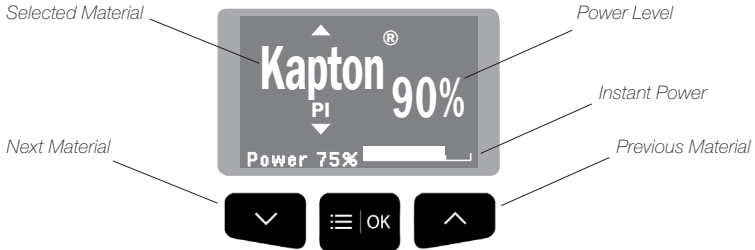


Work Mode

WSS offers two different working modes. Switch the power on choose between Material Mode and Custom Mode by pressing the **OK** button.

1. Material Mode




Choose between the different materials by pressing the buttons **↓** and **↑** to choose between all different material options.

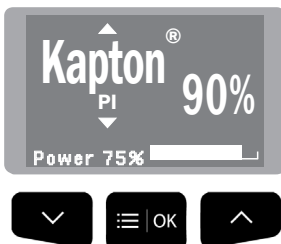

2. Custom Mode




To work on a customized mode, press **OK** and then the buttons **↓** and **↑** to select the power level.

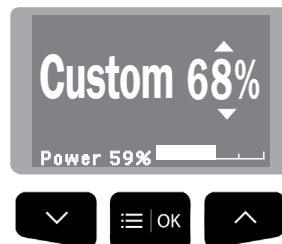

Operation


Depending on where the tool is located, the soldering station switches between three different states: Work, Sleep and Hibernation. These states are available for JBCs wire strippers WS140 and WS440.

1. Work

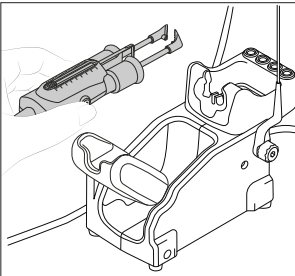


When the wire stripper is lifted from the stand, the cartridges will heat up according to the selected configuration.

2. Sleep





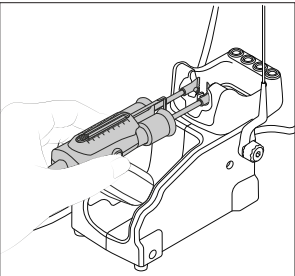


When the wire stripper is in the stand, the power falls after a specified time.

3. Hibernation

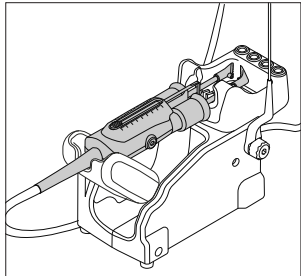

After longer periods of inactivity, the power is cut off and the cartridges cool down to room temperature.

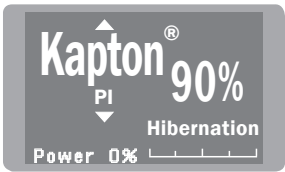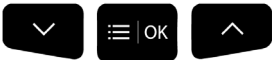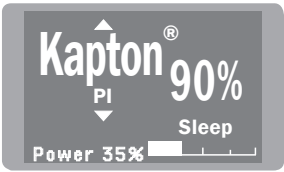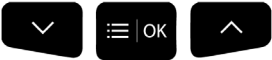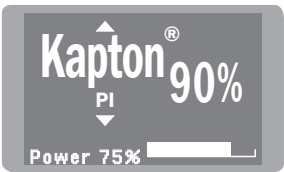

Troubleshooting

Station troubleshooting available on the product page at www.jbctools.com

Material Mode

WSU incorporates predetermined power levels and it also features a customized work mode. It allows you to work on wire insulations made of thermoplastics and thermostable materials such as **Teflon**¹, **Kapton**², **silicone**, **rubber**, etc.

Options included:

| | Insulation Material | Symbol | Power Level |
|----------------|---------------------------|---------|-------------|
| Thermoplastics | Polyvinyl Chloride | PVC | 6% |
| | Polyethylene | PE | 7% |
| | Nylon ¹ | PA | 10% |
| | Kynar ² | PVDF | 16% |
| | Tefzel ¹ | ETFE | 17% |
| Thermostable | Teflon ¹ | FEP | 16% |
| | | PFA | 21% |
| | | PTFE | 40% |
| | Ethylene Propylene Rubber | EPM/EPR | 44% |
| | Silicone Rubber | SI | 51% |
| | Kapton ¹ | PI | 90% |

¹ Registered Trade Marks of DuPont

² Registered Trade Marks of Arkema


Accessories

Pedal P305

It can be used to activate/deactivate the Wire Stripper. Sleep and hibernation delay has to be set to 0 min.

Lift the wire stripper from the stand, press and hold the pedal to activate them and strip the wire. Once the pedal is released the wire stripper enters in Hibernation. To reverse the pedal functionality flip the switch of the connection box.

Default PIN: 0105.

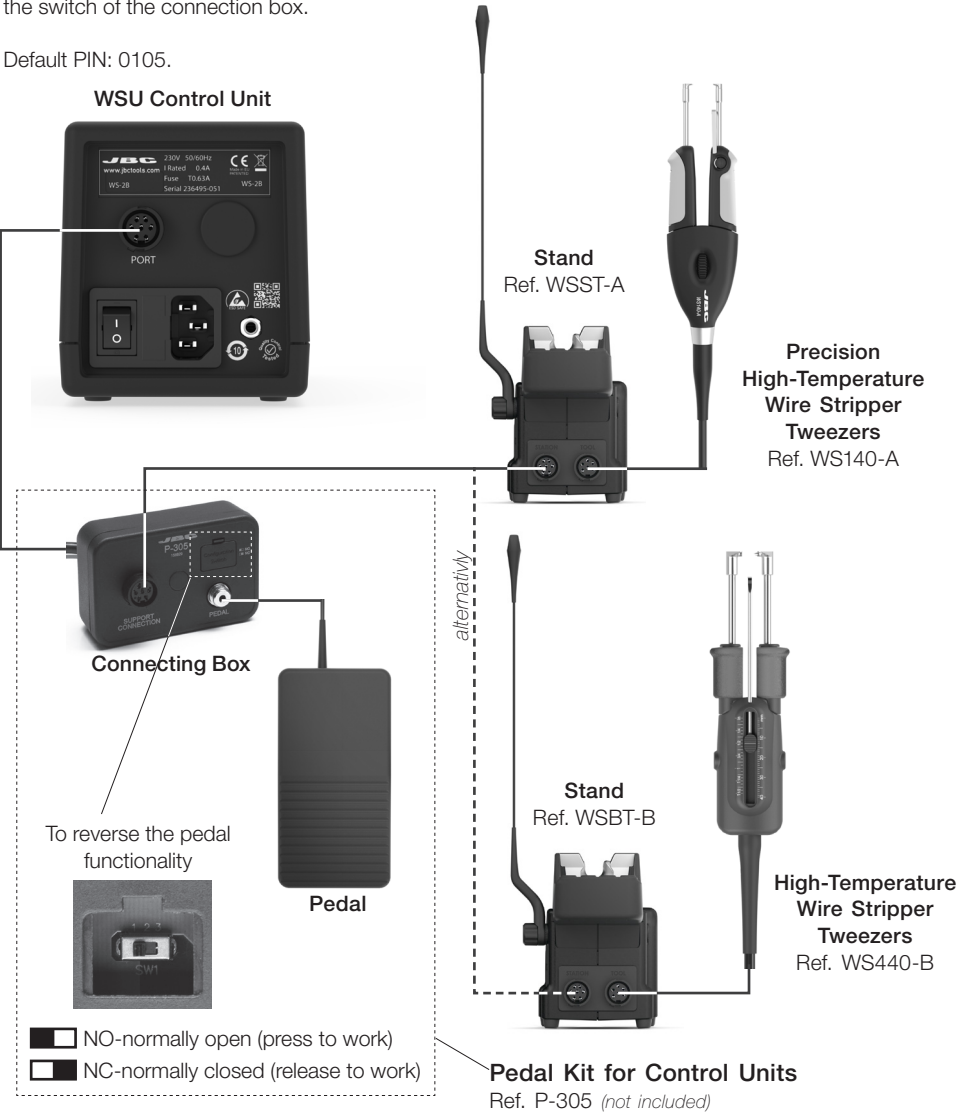

Accessories

Flat Screw Driver

To open or fix the wire stripper screws use JBC Flat Screw Driver Ref. 0023511.




Cartridge Extractor Pliers

To manipulate the cartridges use JBC Cartridge Extractor Pliers Ref. PLR195. More Information at www.jbctools.com




Removing

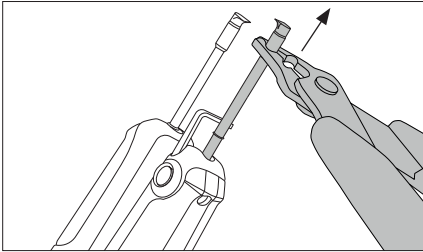

Remove cartridges with JBC pliers.

Inserting and Positioning

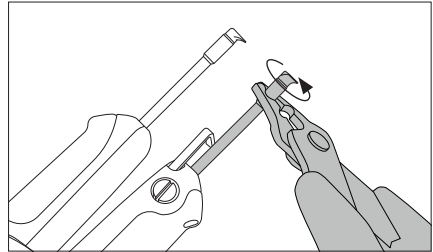

Align cartridges with JBC pliers.

Metal Brush


For cleaning the tips if unwanted material is stuck there. Metal Brush Ref. 0022793.




Maintenance

Before carrying out maintenance or storage, always allow the equipment to cool and unplug the stand from the station and the tool.


- Clean the station screen with a glass cleaner or a damp cloth.
- Use a damp cloth to clean the casing, the stand and the tool. Alcohol can only be used for cleaning the metal parts.
- Periodically check that the metal parts of the tool and stand are clean so that the station can detect the tool status.
- Maintain tip surface clean in order to ensure a correct stripped wire.
- Periodically check all cables.
- Replace a blown fuse as follows (see specification chart) :

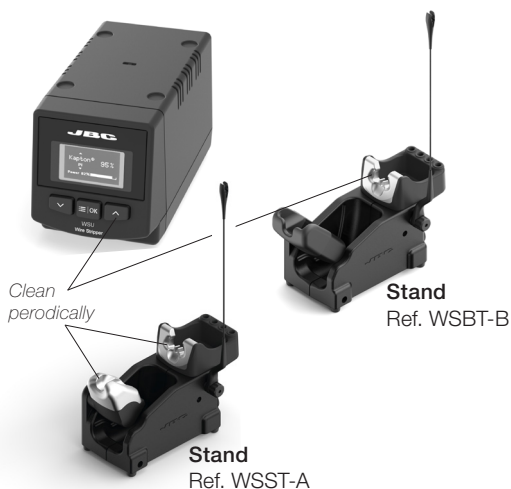

1. take out the fuse holder and remove the fuse. If necessary use a tool to lever it out.

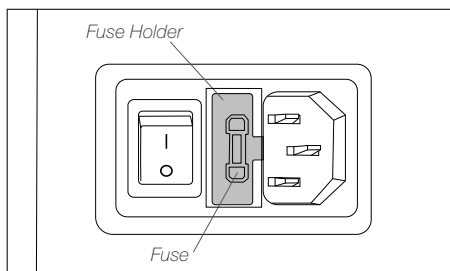

2. Press the new fuse into the fuse holder and reinsert it in the station.

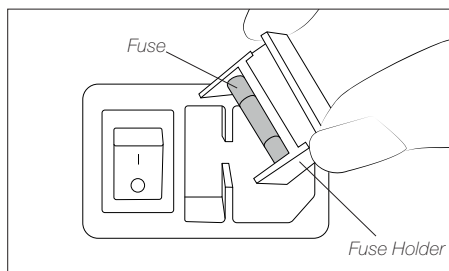

- Replace any defective or damaged pieces. Use original JBC spare parts only.
- Repairs should only be performed by a JBC authorized technical service.

Safety



It is imperative to follow safety guidelines to prevent electric shock, injury, fire or explosion.

Warning

- Do not touch the blade or the metal parts around.
- Do not allow the blade be close to flammable materials.
- Keep your workplace clean and tidy. Wear appropriate protection glasses and gloves when working to avoid personal harm.
- This appliance can be used by children over the age of eight and also persons with reduced physical, sensory or mental capabilities or lack of experience provided that they have been given adequate supervision or instruction concerning use of the appliance and understand the hazards involved.
- Maintenance must not be carried out by children unless supervised.
- Place the tool on the stand when is not in use.
- Turn off the power when not in use, changing parts or storing.

Caution

- Do not use the Wire Stripper for other applications than wire stripping.
- Do not modify or customize the Wire Stripper.
- Do not hit the blade against workbench to eliminate stripped insulation debris. This behavior would damage the blade.
- Remove power from the tool by holding the plug, not the wires.
- Be careful with the fumes produced when stripping. We recomend to use our fume extractor.

Specifications

WSU

High-Temperature Wire Stripper Station

Ref.: **WSU-9A** 100V 50/60Hz. Input Fuse: T1.6A. 5x20mm Output: 15V

Ref.: **WSU-1A** 120V 50/60Hz. Input Fuse: T1.25A. 5x20mm Output: 15V.

Ref.: **WSU-2A** 230V 50/60Hz. Input Fuse: T0.63A. 5x20mm Output: 15V.

- | | |
|--------------------------------------|--------------------------------|
| - Temperature Max : | 800 °C /1472 °F |
| - Power: | 75W |
| - Ambient operating temp: | 10 to 50 °C /50 to 120 °F |
| - Connections: | USB-B |
| - Control Unit Dimensions / Weight: | 180 x 94 x 106 mm / 2.2 kg |
| (L x W x H) | 7.1 x 3.7 x 4.2 in / 4.85 lb |
| - Total Net Weight: | 3.8 kg / 8.4 lb |
| - Total Package Dimensions / Weight: | 368 x 368 x 195 mm / 4.6 kg |
| (L x W x H) | 14.5 x 14.5 x 7.7 in /10.15 lb |

Complies with CE standards.

ESD safe.

JBC

Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

Get 1 extra year JBC warranty by registering here:

<https://www.jbctools.com/productregistration/>
within 30 days of purchase.



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.

