



# Heating Element for DR560

Ref. DSV-DR

## Changing the heating element

For this operation, turn off the station or disconnect the tool.

#### 1. Removing

Loosen the deposit lid (a), remove the screw (b) and withdraw the heating element (c).



#### 2. Placing

Insert the new heating element (a), tighten the lid (b) and the screw (c).



**Recommended:** Remove the lid in a vertical position to empty the tin residue and follow the cleaning guidelines in the tool and station manuals.




#### Important

For a proper connection it is essential to insert the cartridge as far as the mark



### Compatibility

The DSV-DR also works with the previous version DR5600 desoldering iron (Ref. 5600010). In this case, you must take out the washer with a pliers.

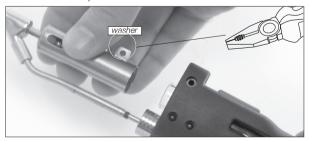



#### Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear due to use or mis-use.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.



This product should not be thrown in the garbage. In accordance with the European directive 2002/96/ EC, electronic equipment at the end of their life must be collected and returned to an authorized recycling facility.

# www.jbctools.com