



www.jbctools.com

INSTRUCTION MANUAL



Nano Tweezers

Ref. NP115-A


Packing List

The following items are included:

Nano Tweezers 1 unit
Ref. NP115-A

Manual 1 unit
Ref. 0020839

Sleeves
Ref. N1738

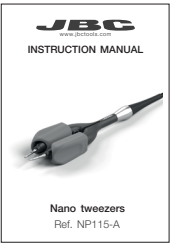

Features

Control Unit
Ref. NAE-1C
NAE-2C
NAE-9C



Nano Tweezers
Ref. NP115-A




Main Switch

Power Socket

Changing cartridges


Save time and change cartridges safely without switching the station off.

1. Removing

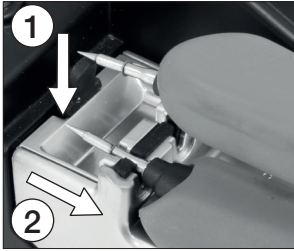


Place the tool in the slot and pull to remove the cartridge.

2. Inserting

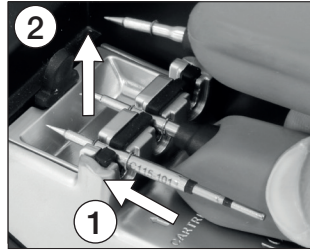


Push the cartridge into the tool to the mark*.

* Important

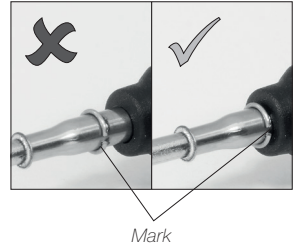

For a proper connection insert the cartridges as far as the mark.


Tip Alignment

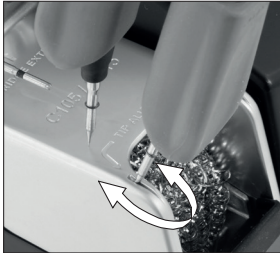

Fit the tip into the aligner and turn to the desired position.

Compatible cartridges

The **NP115-A** works with **C115 cartridges**. Find the model that suits your needs in www.jbctools.com

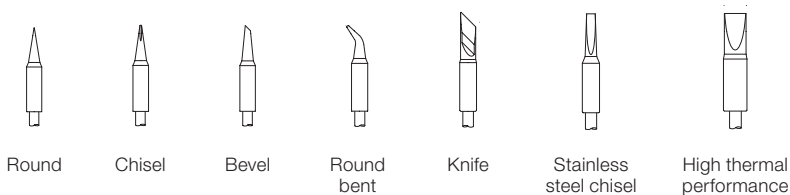

Specifications

- Weight: 50 gr (0.1 lb)
- Cable length: 120 cm (47.2 in)

Complies with CE standards.
ESD protected.

JBC

Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

Get 1 extra year JBC warranty by registering here:
<https://www.jbctools.com/productregistration/>
within 30 days of purchase.



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.

